





Clipsal Fire Tek® Smoke Alarms Installation Guide


Why is installation care so important?


Smoke alarms are important mandatory safety devices to protect people in their homes by providing early warning of a fire to allow enough time to escape safely. However if not installed properly, considering the environment and regulations, they may not function as expected or could even become a nuisance by false alarming. Always follow the installation instructions and make sure to test your install every time.



Installation guide

- 1) Find suitable Locations
 - Ensure to meet the NCC (National Construction Code) requirements and local state building regulations.
 - Avoid dead air space (corners, near bulkheads)
 - Avoid installing near air vents or return air ducts
 - Keep >1m away.
 - (this avoids dust blowing into alarm, and smoke being dispersed away from alarms).
 - Don't install in dusty or humid areas or areas prone to insects.
 - Keep away from bathrooms and laundries or areas producing steam or high humidity
 - Keep away from kitchens (kitchen smoke may lead to nuisance alarming).

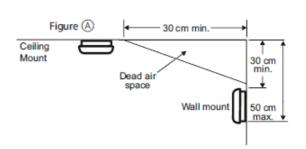

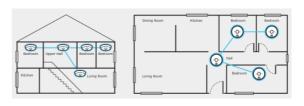



2) Wire for success.


- Keep alarm > 1 metre away from Electrical noise sources such as LED downlights, fluoros or fan motors. Electrical noise may cause false alarms.
- Avoid tapping wiring from circuits feeding electrical noise sources such as ceiling fan motors.
- When interconnecting alarms:
 - Always wire on the same circuit, never wire alarms on different phases or the alarm could be damaged.
 - Always use a common neutral
 - Avoid running the interconnect cables in parallel with mains cables that may induce voltages.
- To avoid electrical noise issues, it is recommended to install smoke alarms on a separate circuit where possible.


3) Avoiding gyprock/construction dust.

- When unpacking and preparing to mount alarm, always keep the dust cover on.
- Avoid gyprock dust entering alarm when drilling or screwing in plugs or wallmates.
 - I.e. Don't leave the alarm directly underneath while dust is falling down.
- When mounting and tightening screws, avoid dust entering into alarm.
- Keep the dust cover on until all cleaning is done and the home occupant has moved in.

4) Mounting the base.

- Make sure that the base is mounted flush to the ceiling.
- If ceiling is uneven, don't overtighten screws or bend the base to avoid any issues clipping in the alarm head
- Use 4 screws if needed
- On the 755RLPSMA4 rechargeable lithium model, before closing the unit onto the base, make sure to remove the transport interlock to activate the rechargeable batteries. In 2019 this will changed to a slide switch.

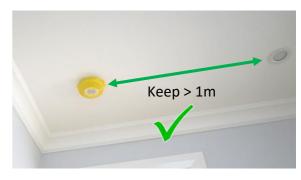

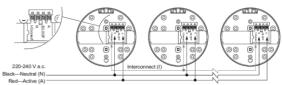










5) Testing the alarm/s

- Once the circuit is energised, check the battery backup is working ok, indicated by the RED LED flashing every 40 seconds. The alarm will also beep once for initial startup.
- Test the alarm by pressing the test/hush button for 3 seconds. Hold for another 3-5 seconds to test all wired interconnected alarms. Hold for another 5-10 seconds to check wireless interconnection is working.
- Do this on all interconnected alarms to make sure the full system is working. Make sure each time, all interconnected alarms go into alarm.
- Always replace the dust cover back onto the smoke alarms until all construction is done and all cleaning is complete.

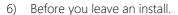

- Before leaving an install, spray insect spray on a cloth and wipe around the alarm to deter insects.
- Leave the installation instructions with the home occupant and remind them about regular maintenance – testing evey month, vacuum alarm every 3-6 months, replace battery every year and replace the whole alarm every 10 years.
- Refer to our maintenaince and trouble shooting quide for more help and tips.
- http://www.clipsal.com/getmedia/94b85292-9efe-4105-bf1a-4f634f417564/Clipsal-Smoke-Alarms-Maintenance-and-Troubleshooting-Guide.PDF.aspx
- 7) Visit Clipsal.com/smokealarms for more information on the Clipsal Fire Tek® Smoke alarms.

clipsal.com/smokealarms









Schneider Electric (Australia) Pty Ltd Contact us: Clipsal.com/feedback

National Customer Care Enquiries: Tel 1300 2025 25 Fax 1300 2025 56 New Zealand National Customer Care Enquiries: Tel 0800 652 999 Fax 0800 101 152 Schneider Electric (Australia) Pty Lto reserves the right to change specifications, modify designs and discontinue items without incurring obligation and whilst every effort is made to ensure that descriptions, specifications and other information in this catalogue are correct, no warranty is given in respect thereof and the company shall not be liable for any error therein.

